

ZOOM PS-02 Drum & Bass Note Number Table

Note No	KIT 1 STANDERD	KIT 2 ROCK	KIT 3 JAZZ	KIT 4 ANALOG	KIT 5 POWER	KIT 6 FUNK	Bass Program
24							Prg.1:Fingered Bass Prg.2:Picked Bass Prg.3:Slap Bass Prg.4:Acoustic Bass Prg.5:Synth Bass
25							
26							
27							
28							
29							
30							
31	Stick	Stick	Stick	Stick	Stick	Stick	
32							
33	Metro Click	Metro Click	Metro Click	Metro Click	Metro Click	Metro Click	
34	Metoro Bell	Metoro Bell	Metoro Bell	Metoro Bell	Metoro Bell	Metoro Bell	
35	Room Kick	Standerd Kick	Standerd Kick	Standerd Kick	Standerd Kick	Standerd Kick	
36	Standard Kick	Room Kick	Jass Kick	Hip Hop Kick	Power Kick	Jass Kick	
37	Stick	Stick	Stick	Stick	Stick	Stick	
38	Studio Snare	Room Snare	Jass Snare	Hip Hop Snare	Power Snare	Funk Snare	
39							
40	Room Snare	Studio Snare	Studio Snare	Studio Snare	Studio Snare	Studio Snare	
41							
42	Closed Hi-Hat	Closed Hi-Hat	Closed Hi-Hat	Hip Hop Closed Hat	Closed Hi-Hat	Closed Hi-Hat	
43	Low Tom	Low Tom	Low Tom	Hip Hop Low Tom	Low Tom	Low Tom	
44	Closed Hi-Hat 2	Closed Hi-Hat 2	Closed Hi-Hat 2	Closed Hi-Hat 2	Closed Hi-Hat 2	Closed Hi-Hat 2	
45							
46	Open Hi-Hat	Open Hi-Hat	Open Hi-Hat	Hip Hop Open Hat	Open Hi-Hat	Open Hi-Hat	
47	Mid Tom	Mid Tom	Mid Tom	Hip Hop Mid Tom	Mid Tom	Mid Tom	
48							
49	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal	Crash Cymbal	
50	High Tom	High Tom	High Tom	Hip Hop High Tom	High Tom	High Tom	
51	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal	Ride Cymbal	
52							
53							
54							
55							
56	Cowbell	Cowbell	Cowbell	Cowbell	Cowbell	Cowbell	
57							
58							
59							
60	High Bongo	High Bongo	High Bongo	High Bongo	High Bongo	High Bongo	
61	Low Bongo	Low Bongo	Low Bongo	Low Bongo	Low Bongo	Low Bongo	
62	Mid Conga	Mid Conga	Mid Conga	Mid Conga	Mid Conga	Mid Conga	
63	Open Conga	Open Conga	Open Conga	Open Conga	Open Conga	Open Conga	
64							
65	High Timbale	High Timbale	High Timbale	High Timbale	High Timbale	High Timbale	
66	Low Timbale	Low Timbale	Low Timbale	Low Timbale	Low Timbale	Low Timbale	
67	High Agogo	High Agogo	High Agogo	High Agogo	High Agogo	High Agogo	
68	Low Agogo	Low Agogo	Low Agogo	Low Agogo	Low Agogo	Low Agogo	
69	Clave	Clave	Clave	Clave	Clave	Clave	
70							
71							
72							
73							
74							
75							
76							
77							
78							
79							
80							
81							
82							
83							
84							
85							
86							
87							
88							
89							
90							
91							
92							
93							
94							
95							