

# AC Series Firmware Update Guide (Windows)

Copyright(C) 2017 ZOOM Corporation. All Rights Reserved.

● Zoom Corporation does not bear liability for any damages or third-party claims arising from the use of the software, whether directly or indirectly. Unauthorized redistribution, sale, leasing, renting, alteration, or reverse engineering of the software is prohibited. Features and specifications of the software and the contents of the documentation may be changed in future without notice.

• Windows® is a registered trademark of Microsoft ® Corporation.  
Note: Other Product names, registered trademarks and company names in this document are the property of their respective companies.  
Note: All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

The illustrations in these instructions might differ from actual screens.

## Contents

1. Introduction.....	2
2. Supported operating systems.....	2
3. Installing the standard Windows driver on the computer.....	2
Precautions .....	2
4. Updating the firmware.....	3

## 1. Introduction

Thank you very much for downloading the firmware update application for the AC-2/AC-3.

This document explains how to update the firmware for the AC-2/AC-3.

## 2. Supported operating systems

 
Windows® 7 SP1 or later (32-bit/64-bit)

Windows® 8.1 (32-bit/64-bit)

Windows® 10.1 (32-bit/64-bit)

## 3. Installing the standard Windows driver on the computer

Connect the AC-2/AC-3 to the computer using a USB cable. If you connect to a USB port that is different from the one that you used when installing the Windows standard driver previously, "Driver Software Installation" will appear.

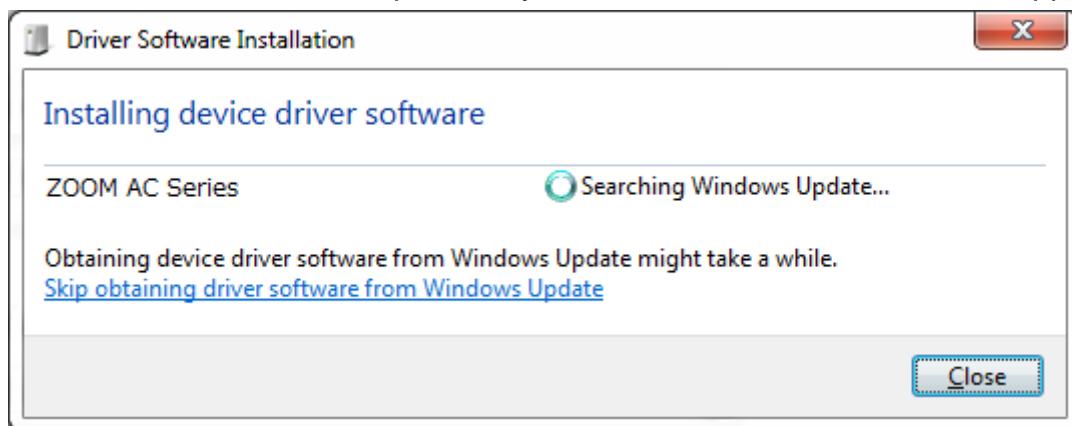


After a short time, the standard driver installation will complete.

### Precautions

 - 1) Log in to your computer using an account with administrator privileges.
- 2) Before starting this application, shut down all other applications that are running.  
In addition, if any MIDI or audio devices are connected by USB cable to the computer you are using, disconnect them all.

## 4. Updating the firmware

4.1 Use a USB cable to connect the AC-2/AC-3 to a computer.

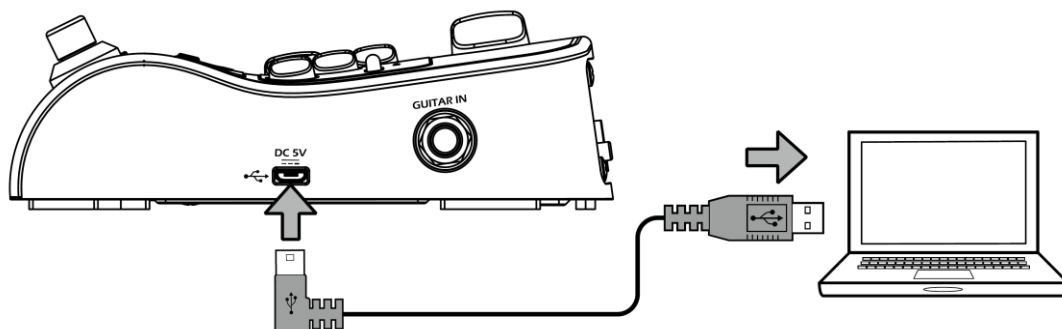


4.2 While pressing both **TUNER [MUTE]** and **ANTI F.B.**, turn the POWER switch ON.

### NOTE

 The firmware update requires the standard driver. Follow the instructions of the wizard to complete its installation. (See “Installing the standard Windows driver on the computer” on page 2.)

4.3 Double-click the firmware update application icon to launch.

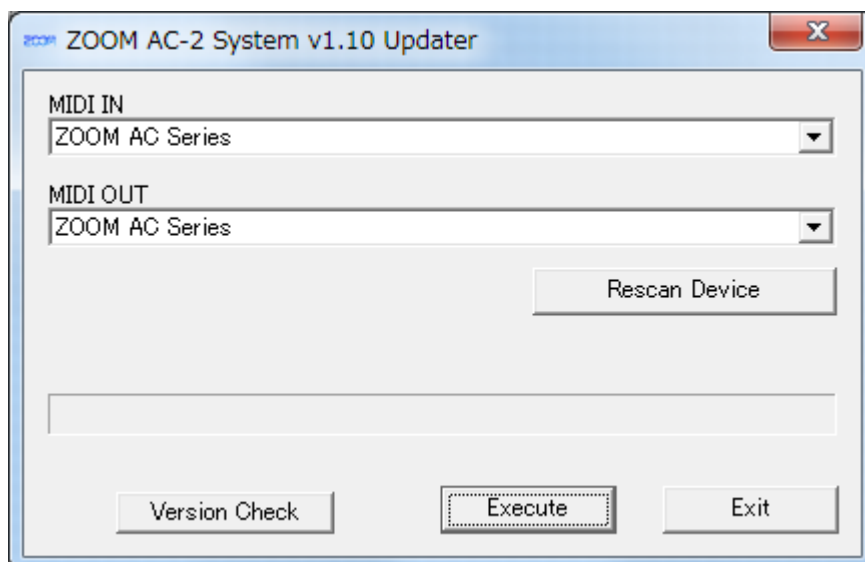


4.4 With a AC-2/AC-3, click the “MIDI IN” and “MIDI OUT” fields to open lists of MIDI devices and select “ZOOM AC Series” for both.

If nothing is shown in the fields, click [Rescan Device] button.

4.5 Click the [Version Check] button to check the firmware version.

 
4.6 Click the [Execute] button to start the firmware update. The progress of the firmware update appears as a bar like this.

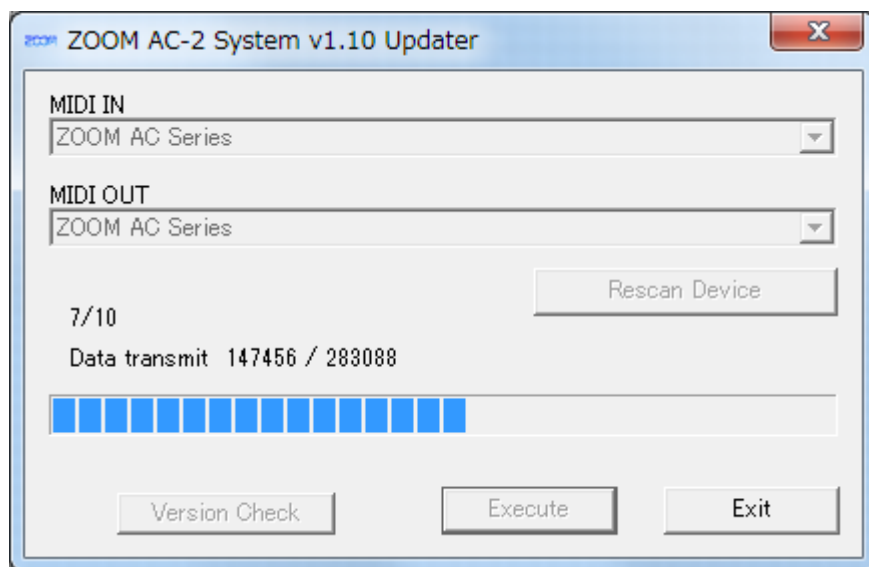

Do not disconnect the USB cable while the firmware is being updated.

In the unlikely event that a firmware update should fail, follow the procedures from step 4.1 to update the firmware again.

 4.7 When the firmware update completes, it will appear as follows.

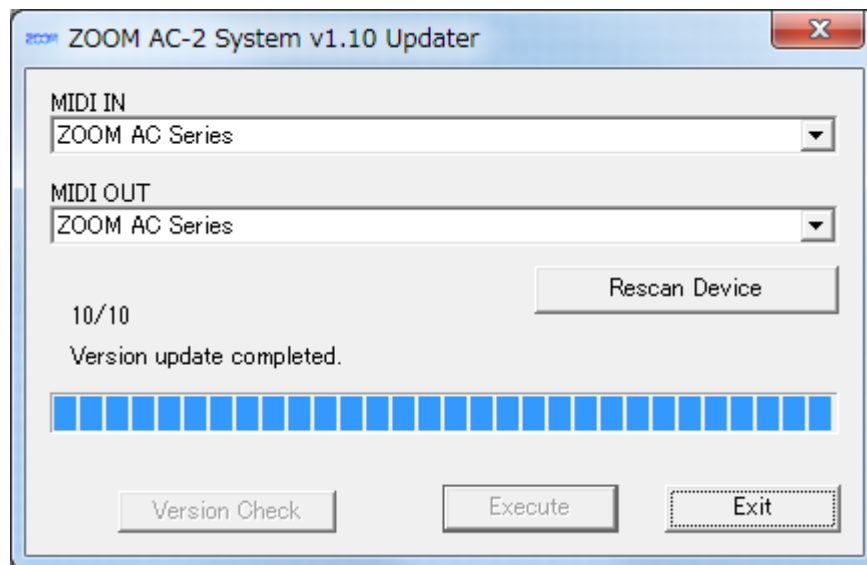

Click the [Exit] button to close the firmware update application. Then, turn the AC-2/AC-3 power off.

This completes the firmware update.