

S2t C5.1t ASIO Driver

Installation Guide

Copyright© 2008 ZOOM Corporation. All Rights Reserved.

ver1.0.0

Zoom Corporation does not bear liability for any damages or third-party claims arising from the use of the software, whether directly or indirectly. Unauthorized redistribution, sale, leasing, renting, alteration, or reverse engineering of the software is prohibited. Features and specifications of the software and the contents of the documentation may be changed in future without notice.

The actual content of screens and messages on the computer may differ from the illustrations used in this manual.

Contents

<u>Introduction</u>	2
<u>Operation Environment Requirements</u>	2
<u>Precautions</u>	2
<u>Updating the driver</u>	3
<u>Installation</u>	4
<u>Uninstallation</u>	8



ZOOM CORPORATION

ITOHPIA Iwamotocho 2chome Bldg. 2F, 2-11-2, Iwamoto-cho,
Chiyoda-ku, Tokyo 101-0032, Japan
Web Site: <http://www.zoom.co.jp>

Introduction

Thank you for downloading the S2t C5.1t ASIO Driver.
This document describes how to install and uninstall the driver.

Operation Environment Requirements

Operating system: Windows XP (SP2) or later / Windows Vista or later

Precautions

 
- 1) Log on to your computer with an account that has Administrator privileges.
- 2) Before starting this application, shut down all other applications that are running.

Updating the driver

If a S2t C5.1t ASIO Driver is already installed, first uninstall the old driver as described [here](#). Then install the new driver as described [here](#).


Installation

1. **Start Windows without any USB devices connected**
(except keyboard and mouse).
2. **Shut down any applications that are running.**
3. **Double-click on the "S2tC5.1t_ASIO.exe" icon.**

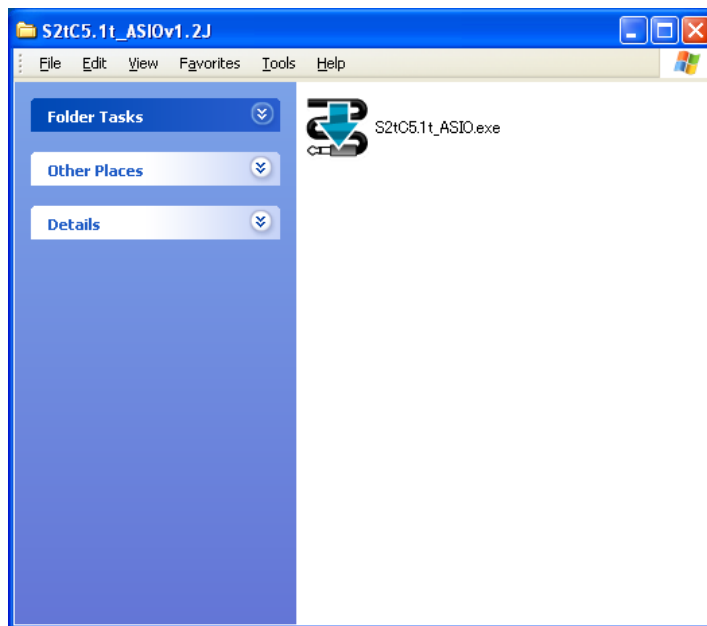


* If the message "In order to install software under this operating system you must be logged-on with Administrator privileges. Setup cannot continue." appears, log on to Windows with an account that has Administrator privileges and then start the installation again.

 4. **To start the installation, click [Next].**

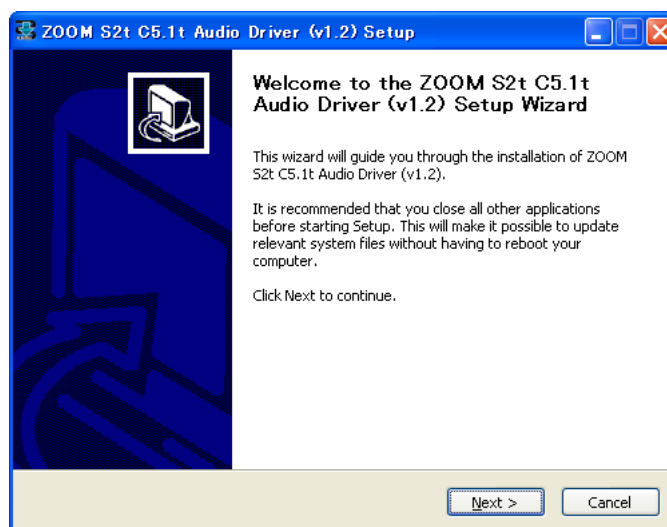


5. License Agreement

 The License Agreement is displayed. Read the agreement and place a check mark in the "I accept the terms in the License Agreement" box to confirm your acceptance of the agreement. Then click [Next].

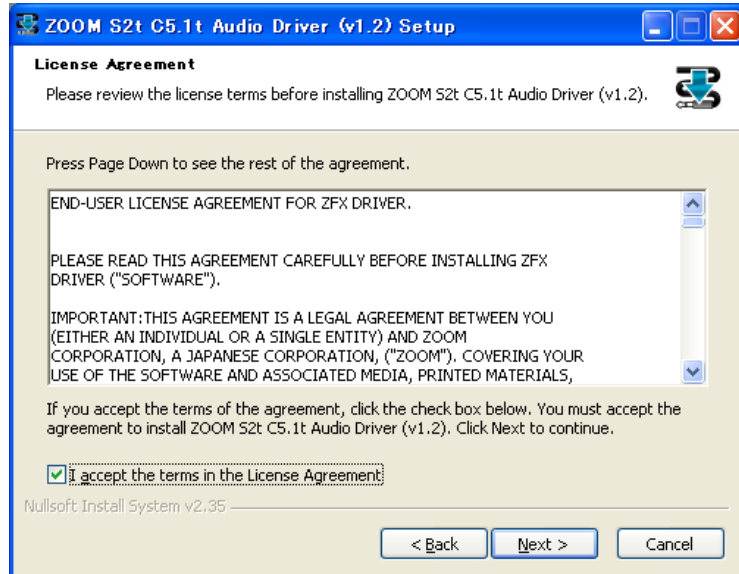

6. Choose Start Menu Folder

 You can specify the destination folder where the shortcut to uninstall/repair the driver will be located. Normally, simply click [Install].

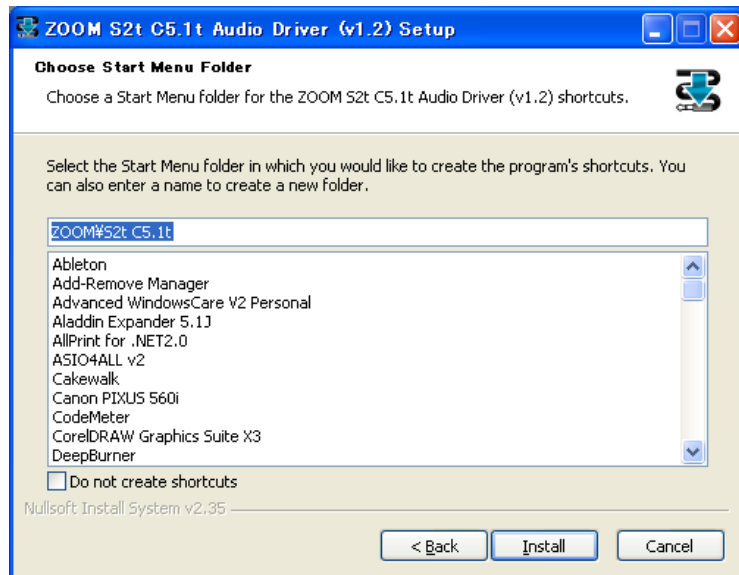

7. Welcome to ZOOM Driver Setup!

A dialog box such as shown below will appear three times. Click [Next] every time to proceed.



If a software installation warning dialog box is shown, click [Continue].

If a "Windows Security message indicating that the driver software publisher cannot be verified" appears, click [Install this driver].

* In this case, the message "ZOOM S2t C5.1t Audio Driver (Not Responding)" may appear, but this is not a problem.

8. Please plug-in the device now



When the "Please plug-in the device now" dialog box appears, connect the unit and the computer with the USB cable and click [Next]. After plugging in the USB cable, do not disconnect it until the installation is completed.

When the message "Welcome to the Hardware Update Wizard" (Windows XP) appears, select "Install the software automatically" and click [Next] to complete the process.

When the message "Found New Hardware" (Windows Vista) appears, select "Locate and install driver software" and click [Continue] to complete the process.

When the Windows search wizard has completed, return to the "ZOOM S2t C5.1t Audio Driver" and click [Next].

 
If a "Hardware Installation" warning dialog box appears, click [Continue Anyway].

9. Finish



When a dialog box such as shown above appears, click [Finish].


10. Installation complete

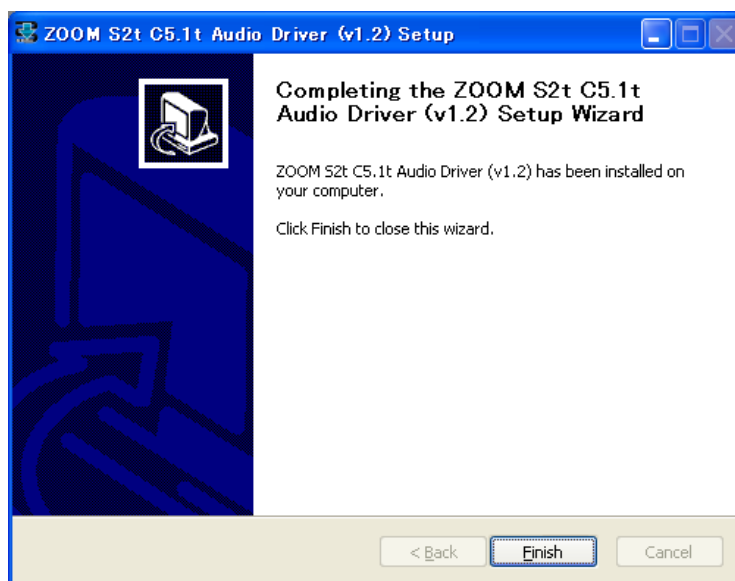


Driver installation is now complete. Click [Finish] to close the installer.

Uninstallation

 
1. Open the Windows Start menu, navigate to "ZOOM", then "S2t C5.1t", and select "Uninstall ZOOM S2t C5.1t Audio Driver".

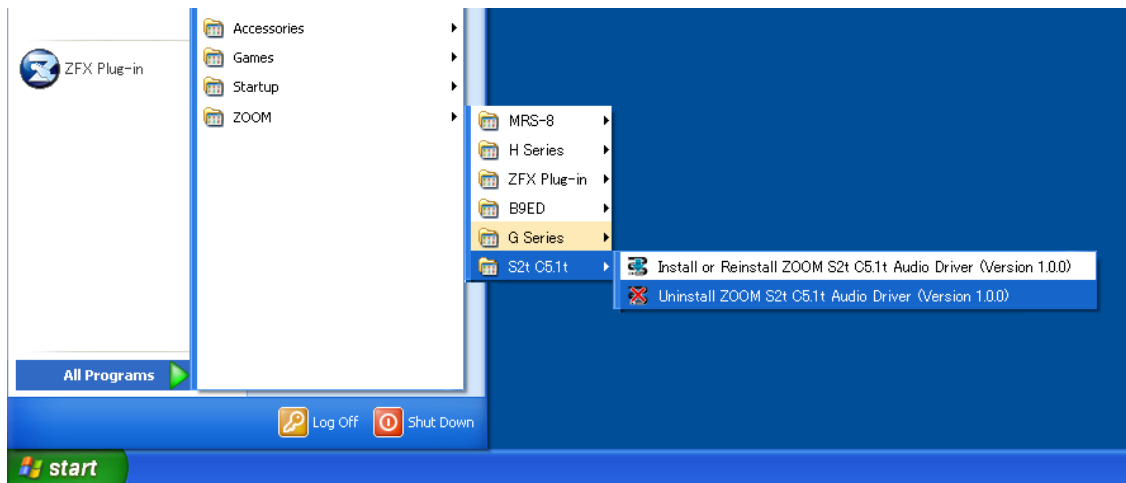

 
2. The uninstallation process starts. Confirm that you want to proceed by clicking [Yes]. To cancel the process, click [No].

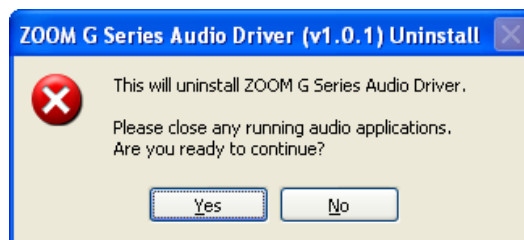

 3. To uninstall the driver, click [Uninstall]. To cancel the uninstallation, click [Cancel].

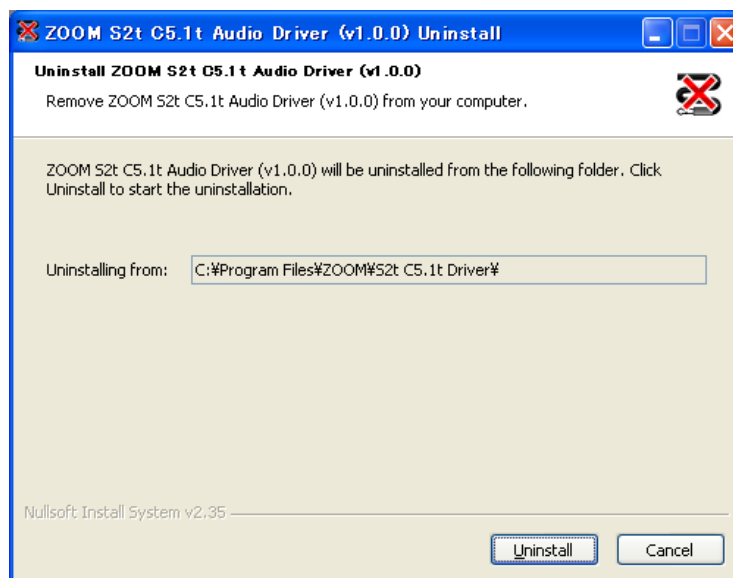

 -
4. The uninstaller runs. When the progress bar has reached the right end, the process is completed.

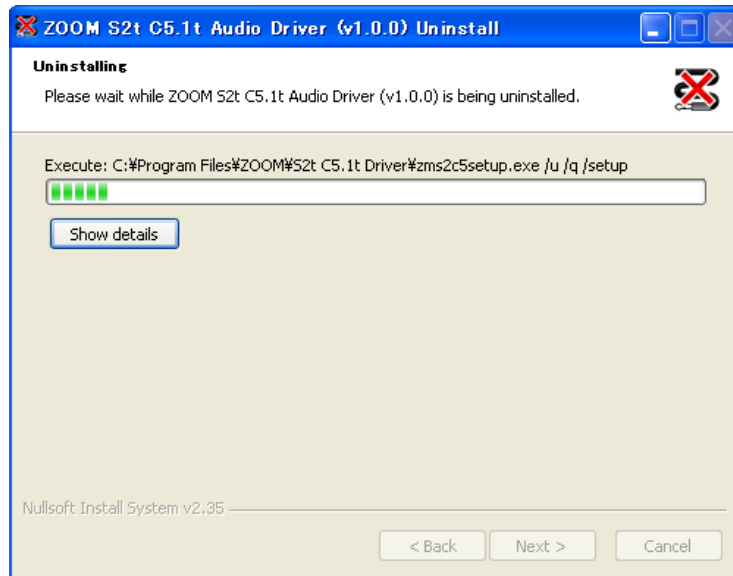

5. Driver uninstallation is now complete. Click [Finish] to close the uninstaller.

