

U Series Firmware Update Guide (Windows)

Copyright(C) 2016 ZOOM Corporation. All Rights Reserved.

●Zoom Corporation does not bear liability for any damages or third-party claims arising from the use of the software, whether directly or indirectly. Unauthorized redistribution, sale, leasing, renting, alteration, or reverse engineering of the software is prohibited. Features and specifications of the software and the contents of the documentation may be changed in future without notice.

- Windows® is a registered trademark of Microsoft® Corporation.
 - Intel®, Celeron®, Intel® Atom™, Intel® Core™ and Pentium® are trademarks or registered trademarks of Intel Corporation in the U.S. and/or other countries.
- Note: Other Product names, registered trademarks and company names in this document are the property of their respective companies.
- Note: All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

The illustrations in these instructions might differ from actual screens.

Contents

1. Introduction	2
2. System Requirements	2
Precautions	2
3. Updating the firmware	3

1. Introduction

Thank you very much for downloading the firmware update application for the U-44/U-24/U-22.

This document explains how to update the firmware for the U-44/U-24/U-22.

2. System Requirements

 
- OS : Windows® 7 SP1 or later (32bit/64bit)
 Windows® 8.1 (32bit/64bit)
 Windows® 10 (32bit/64bit)
- CPU: Intel® Core™ i3 or faster
 (Operation is not guaranteed with CPUs from Intel® Atom™, Celeron® or Pentium® series or CPUs made by AMD®)
- USB: USB 3.0/USB 2.0
 (Only USB host controllers with Intel® Chipsets are supported. Operation is not guaranteed when used with USB hubs or expansion cards.)

Precautions


- 1) **Log in to your computer using an account with administrator privileges.**
- 2) **Confirm that the U-44/U-24/U-22 driver has already been installed on your computer.**
- 3) **Before starting this application, shut down all other applications that are running. In addition, if any MIDI or audio devices are connected by USB cable to the computer you are using, disconnect them all.**

3. Updating the firmware

- 3.1. Connect the U-44/U-24/U-22 and the computer using a USB cable. Then, turn the U-44/U-24/U-22 power on.
- 3.2. Double-click the firmware update application icon to launch it.
After launching, a window that looks like this appears. Confirm that “Device found. Ready for update.” is being shown. If it is not, click **[Rescan Device]** button.

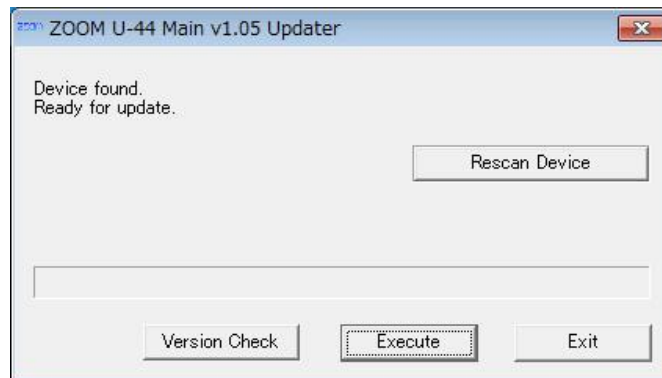


 - 3.3. Click the **[Version Check]** button to check the firmware version.
- 3.4. Click the **[Execute]** button to start the firmware update. The progress of the firmware update appears as a bar like this.

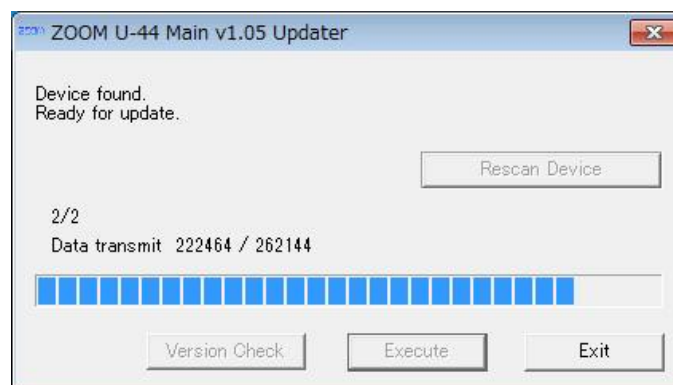

Do not disconnect the USB cable while the firmware is being updated.

 - 3.5. When the firmware update completes, it will appear as follows.
Confirm that “Version update completed.” is being shown.

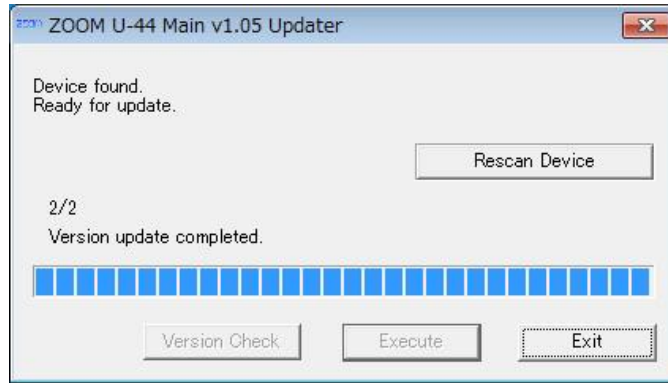

Click the **[Exit]** button to close the firmware update application. Then, turn the U-44/U-24/U-22 power off.

This completes the firmware update.