

R8 Firmware Update Guide

Copyright(C) 2018 ZOOM Corporation. All Rights Reserved.

● Zoom Corporation does not bear liability for any damages or third-party claims arising from the use of the software, whether directly or indirectly. Unauthorized redistribution, sale, leasing, renting, alteration, or reverse engineering of the software is prohibited. Features and specifications of the software and the contents of the documentation may be changed in future without notice.

The illustrations in these instructions might differ from actual screens.

Updating the firmware



The **R8** firmware can be updated to the latest versions.


1. Copy the file for updating the firmware to the root directory on an SD card.


NOTE

An update file for the latest version can be downloaded from the ZOOM website (www.zoom.co.jp).

2. Insert the SD card into the **R8**.

 
3. While pressing and holding , set  to ON.

4. Select OK, and press .

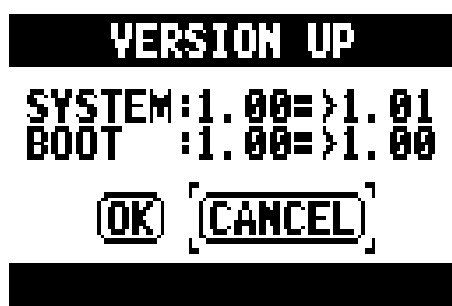

NOTE

Do not turn the power off or remove the SD card during a firmware update. Doing so could cause the **R8** to become unstartable.

5. After the firmware update completes, turn the  off.

NOTE

In the unlikely event that the firmware update should fail, follow the procedures from the beginning again to update the firmware.